

EAGLERISE 伊戈尔NFC PC端说明

NFC product description on PC side



01 连接NFC阅读器和电脑

笔记本/Windows 10

USB to Type B Cable

NFC Reader FEIG(ID CPR30-USB)



رررہ

打开NFC 软件









EAGLERISE 伊戈尔



EAGLERISE 伊戈尔 读取驱动器参数 ✗ Eaglerise NFC Reader ā L EN 伊莱派 Reader Config Read File Save File Read Write Auto Scan About Us Language Current CH1 Current(mA) CH2 Current(mA) CH3 Current(mA) * + + ON CLO Time 0 Level 50 level n

点击"读取"按钮,读取LED驱动器参数

将驱动器放置在NFC阅读器上



r Config	Read Fi	1 1e	Save Fi	ile	Read		Write	A	uto Scan	Ab	伊戈尔 out Vs	Lang	uage		
urrent															
CH1 Current(=A)					CH2 Current(sk)						CH3 Current(=A) 157 + 50				
30 400				400											
.0															ON O
			221	20	25	30	35	40	45	50	55	60	65	70	75
ne O	5	10	15	20											

EAGLERISE

单击 "写入" 按钮设置当前修改的参数 *设置时不要从NFC阅读器上取下LED驱动器



修改恒流明参数





EAGLERISE 伊戈尔





THANKS

NFC product description on PC side

123

EAGLERISE